

BLUESOUND®

TS100 Universal TV Stand for PULSE SOUNDBAR

Standards & Safety Precautions

Installation

Bluesound recommends the following:

- Follow all installation instructions for mounting the TV and PULSE SOUNDBAR to the TS100
- Position the PULSE SOUNDBAR as low as possible on the TS100 – we recommend not to exceed 1-2" (25-50mm) from the table surface (Figure 1)
- Position the TV as low as possible above the PULSE SOUNDBAR – we recommend not to exceed 1" (25mm) from the top of PULSE SOUNDBAR (Figure 1)

Securing the Stand

Bluesound recommends following precautions to enhance the stability of the TS100. An unsecured TS100 may topple and could result in property damage, bodily injury or even death.

- For extra security, Bluesound recommends tethering the TS100 to a wall and/or stand using wire and a wall anchor (not supplied) (Figure 2)
- Do not allow children to play or climb on nearby furniture or on the TS100 itself
- Avoid placing or hanging additional items on the TS100
- Never install the TS100 on slippery, unstable and/or uneven surfaces or furniture that can easily be used as steps, such as a chest of drawers
- Install the TS100 where it cannot be pulled, pushed or knocked over
- Route all AC Power Cords and connecting cables so that they are not accessible to curious children

Please Note:

- The maximum TV size should not exceed 65"
- The maximum TV weight should not exceed 77 lbs (35kg)
- Some TVs may not be compatible with the TS100

Figure 1

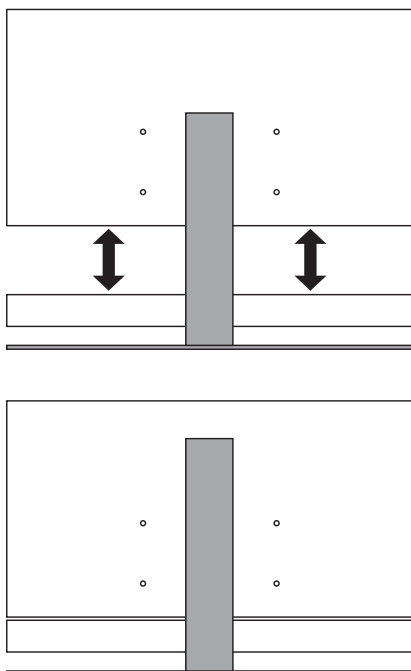


Figure 2

